size Sandmaster It utilises a 1" (25mm) technology as the full the same bearing type Micro Sandmaster uses The Modular Handled


Sandmaster can be set in the best position for The head of the Micro at areas. to access difficult to get the project to be sanded.

sanded. The sponge sponge section to allow also helps to dissipate and follow the shape of any heat that may be it to blend into any curve The sanding pad has a project being

and 400 grit. abrasive 120, 180, 240 each of four grades of set includes two discs of The Micro Sandmaster


built up from friction.

glass like finish of the wood is given a will ensure the surface By using these in order from coarse to very fine it works at its optimum without the surface of the wood to ensure generating excessive heat from Allow the abrasive to lightly touch

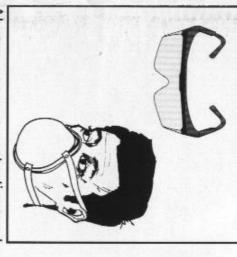

sanding pad enabling it

Always use eye protection and a form of dust mask as well as woodworking. an air cleaner and dust extractor when doing any form of

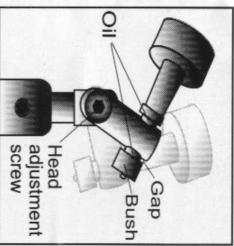


ROBERT SORB


and re-tighten. spot of oil on the bearing. Loosen the head to the required position slight gap between the bush and the head adjustment screw, move the main body. Regularly place a Always ensure that there is

middle section

to moving into the slower moving the outer edge of your work prior Start the Sandmaster rotating on

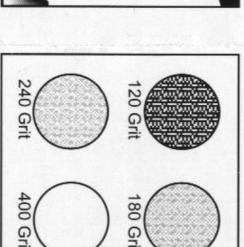

glass like finish is achieved all scratches are removed and a the fine 400 grit. This will ensure coarse abrasive and then work Start with the 120 grit medium through in number order up-to

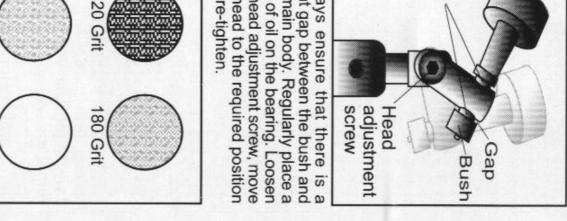

to start rotating.

lightly to allow the abrasive disc

Touch the surface of the wood.

discs, place thumb over the edge to avoid damage to the sponge When removing the abrasive