

OWNER'S OPERATING MANUAL


DUST COLLECTOR

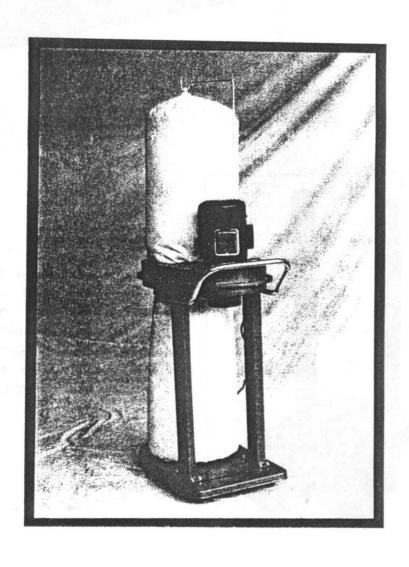


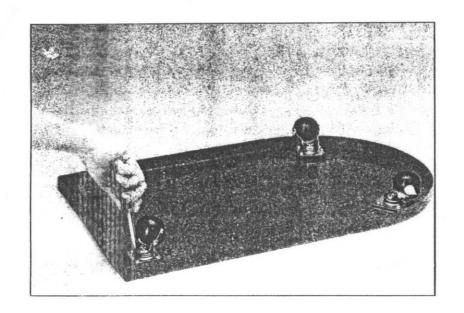

TO ASSEMBLE, FIRST PLACE THE BASE PLATE UPSIDE DOWN AND ATTACH THE TOUR CASTERS TO THE HOLES PROVIDED AND TIGHTEN WITH THE WRENCH. FIG. 1.


COLLECTOR BODY DOWN
ATTACH INSTALL THE TWO
FIXED SUPPORT TO THE
DOUBLE USING FOUR 5/16"x
1/2" HEX FLANGE HEAD
SCREWS TIGHTEN ALL FASTENERS SECURELY. FIG. 2.

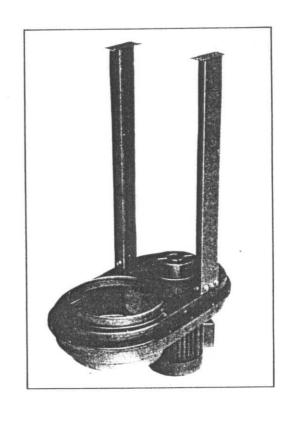


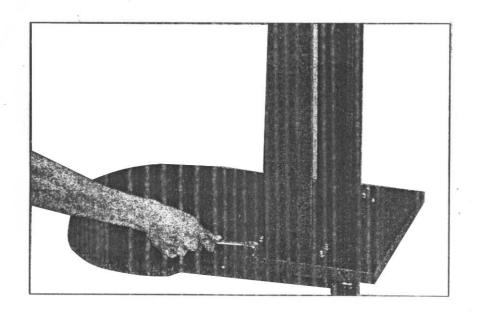

BASE PLATE UPSIDE EQUAL OR FAIR THE TWO FIXED SUPPORT USING EIGHT 5/16" x1/2" HEX FLANGE HEAD SCREWS. TIGHTEN ALL FASTENERS SECURELY. FIG. 3


INSTALL THE HANDLE TO THE FIXED SUPPORT OUTSIDE USING FOUR 5/16"x 1-1/4" FLAT HEAD SCREWS. TIGHTEN WITH A SCREW DRIVER FIG. 4

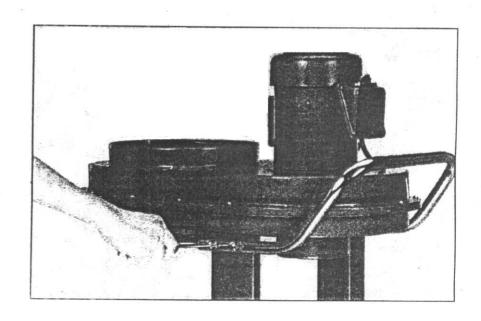

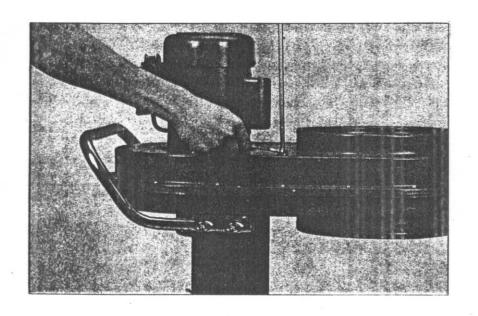



ATTACH THE UPPER BAG SUPPORT TO THE COLLECTOR BODY USING WASHER AND NUT TIGHTEN ALL FASTEN-ERS SECURELY. FIG. 5

NOW ATTACH THE FILTER AND COLLECTOR BAGS TO THE COLLECTOR BODY USING TWO HOSE CLAMPS. TIGHTEN WITH SCREW DRIVER FIG. 6.

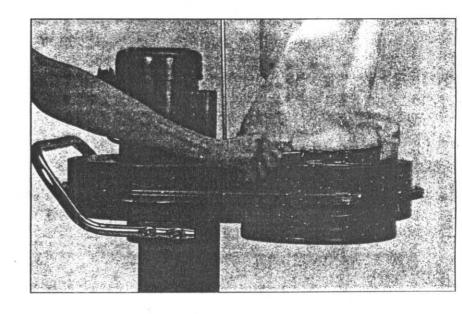

AFTER THE BAG ARE SECURED. THE UPPER BAG SHOULD BE HUNG FROM THE UPPER BAG SUPPORT. FIG. 8

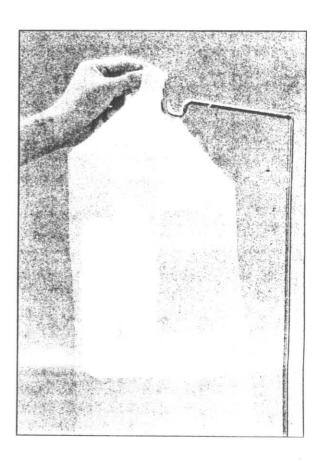

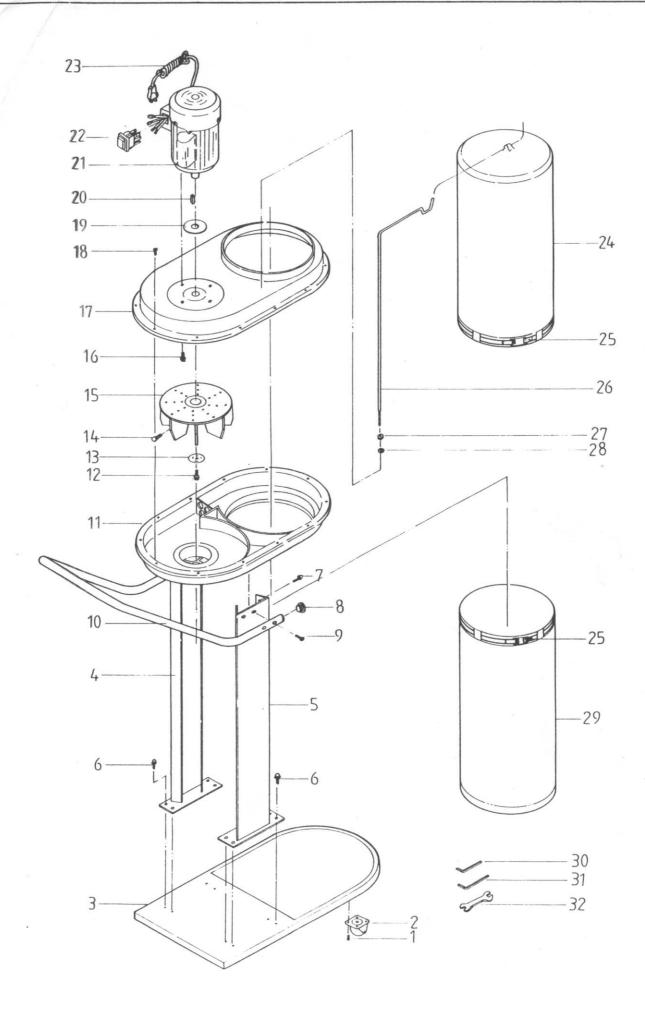

PARTS LIST

REW 3" × 3" L PAN. FLG. HD. STER ASE PLATE FI FIXED SUPPORT. GHT FIXED SUPPORT REW 5/16 X 1/2 L HEX. FLG. HD. REW 5/16 X 1/2 L HEX. FLG. HD. OSER PIPE REW 5/16 X 11/4 L FL. HD. NDLE BAR WN-COLLECTOR BODY REW M6 X 20 L HEX. SOC. HD. ASHER IT SCREW 5/16 X 5/16 SOC. HD.	16 4 1 1 1 8 4 2 4 1 1
FI FIXED SUPPORT. SHI FIXED SUPPORT REW 5/16 X 1/2 L HEX. FLG. HD. REW 5/16 X 1/2 L HEX. FLG. HD. OSER PIPE REW 5/16 X 1/4 L FL. HD. NDLE BAR WN-COLLECTOR BODY REW M6 X 20 L HEX. SOC. HD.	1 1 8 4 2 4 1 1
FI FIXED SUPPORT. SHI FIXED SUPPORT REW 5/16 X 1/2 L HEX. FLG. HD. REW 5/16 X 1/2 L HEX. FLG. HD. OSER PIPE REW 5/16 X 1/4 L FL. HD. NDLE BAR WN-COLLECTOR BODY REW M6 X 20 L HEX. SOC. HD.	1 1 8 4 2 4 1 1
SHT FIXED SUPPORT REW 5/16 X 1/2 L HEX. FLG. HD. REW 5/16 X 1/2 L HEX. FLG. HD. OSER PIPE REW 5/16 X 11/4 L FL. HD. NDLE BAR WN-COLLECTOR BODY REW M6 X 20 L HEX. SOC. HD.	1 8 4 2 4 1 1
REW 5/16 X 1/2 L HEX. FLG. HD. REW 5/16 X 1/2 L HEX. FLG. HD. OSER PIPE REW 5/16 X 11/4 L FL. HD. NDLE BAR WN-COLLECTOR BODY REW M6 X 20 L HEX. SOC. HD.	8 4 2 4 1 1
OSER PIPE REW 5/16 X 11/4 L FL. HD. NDLE BAR WN-COLLECTOR BODY REW M6 X 20 L HEX. SOC. HD.	4 2 4 1 1
OSER PIPE REW 5/16 X 11/4 L FL. HD. NDLE BAR WN-COLLECTOR BODY REW M6 X 20 L HEX. SOC. HD.	2 4 1 1
REW 5/16 X 11/4 L FL. HD. NDLE BAR WN-COLLECTOR BODY REW M6 X 20 L HEX. SOC. HD.	1 1 1
NDLE BAR WN-COLLECTOR BODY REW M6X20L HEX.SOC.HD.	1 1 1
WN-COLLECTOR BODY REW M6X20L HEX.SOC.HD.	1
REW M6X20L HEX.SOC, HD,	1
ASHER	
	1
T SCREW 5/16 X 5/16 SOC. HD.	
	2
RBO FAN	1
REW 1/4 X 1/2 L HEX FLG HD	4
-COLLECTOR BORY	1
REW 3/16 X 3/8 L PAN, FLG. HD.	16
CKING	1
Y 5 X 5 X 25 mm	1
TOR	1
/ITCH	1
WER CORD	1
TER BAG	1
SE CLAMPS	2
PER BAG SUPPORT	1
T ⁵ /16	1
SHER 5/16	1
LECTOR BAG	1
EN WRENCH 4mm	1
EN WRENCH 5mm	1
7 P. C.	1
1	WER CORD LTER BAG SE CLAMPS PER BAG SUPPORT T 5/16 SHER 5/16 LECTOR BAG LEN WRENCH 4mm LEN WRENCH 5mm EN END WRENCH 12mm