



W812 Lathe Parts List

PARTS LIST

ITEM	DESCRIPTION	Q' TY	ITEM	DESCRIPTION	Q' TY
M1	HEADSTOCK	1	M39	TOOL REST BODY	1
M2	HEADSTOCK SPUR	1	M40	ECCENTRIC ROD	1
M3	FACEPLATE	1	M41	"C"RING S-19	1
M4	SPINDLE	1	M42	BOLT	2
M5	KEY 4X4X80(mm)	1	M43	CLAMP	2
M6	BEARING 8020SZ	1	M44	HEX NUT M18	2
M7	BEARING 8020SZ	1	M45	TAILSTOCK LOCK	1
M8	SPRING	1	M46	TAIL SPINDLE	1
M9	BRACKET—SHIFING LEVER	1	M47	TAIL STOCK SCREW	1
M10	BALL BEARING 6006Z	1	M48	TAILSTOCK	1
M11	"C"RING S-25	1	M48-1	SOCKEY HEAD SET SCREW M6X19	1
M12	PULLEY—SPINDLE(RIGHT)	1	M49	HANDLE WHEEL	1
M13	V—BELT	1	M50	LOCK HANDLE—TAILSTOCK	1
M14	PULLEY—SPINDLE(LEFT)	1	M51	WASHER	1
M15	"C"RING S-24	1	M52	EXTENSION BED	1
M16	PUSH—OUT ROD	1	M53	SCREW M10X25	2
M17	NUT—LOCK M12	1	M53-1	SPRING WASHER	2
M18	CLAMP—LEFT	1	M54	STAND ASSEMBLY	
M19	HEX. HD. SCREW M8X25	2	M54-1	STAND LEG	1
M20	BACK	1	M54-2	STAND SWITCH LEG	1
M21	GEAR ASSEMBLY	1	M54-3	STAND UPPER COVER	2
M21-1	HEX SOCKEY HD. SCREW	2	M54-4	STAND LONG—CROSS SUPPORT	2
M22	CLAMP—RIGHT	1	M54-5	STAND SHORT—CROSS SUPPORT	2
M23	HEX WRENCH	4	M54-6	STAND LEG	2
M24	KNOB	1	M55	BED	1
M25	SPINDLE WRENCH	2	M56	SCREW M8X16	8
M26	"C"RING S-16	1	M57	SWITCH	1
M27	SLEEVE	1	M58	SCREW M4X16	2
M28	SPRING	1	M59	PLASTIC JAM NUT M20X1.5	1
M29	PULLEY—MOTOR(RIGHT)	1	M60	CARRIAGE BOLT STAND	24
M30	PULLEY—MOTOR(LEFT)	1	M61	WASHER—STAND	24
M31	SCREW M5X10	4	M62	NUT STAND	32
M32	KEY 4X4X85(mm)	1	M63	POWER CORD	1
M33	MOTOR	1	M64	NAME LABLE	1
M33-1	NAME PLATE FOR MOTOR	1	M65	WARNING LABLE	1
M34	COVER—MOTOR	1	M66	SPEED LABLE	1
M35	ANGULAR SETTING ASSEMBLY	1	M67	NUT M4	2
M36	TOOL REST	1	M68	SWITCH BOX	1
M37	HANDLE ASSEMBLY	3	M69	SWITCH FIXING PLATE	1
M38	EXTENSION TOOL REST	1	M70	COVER	1