

# Charnwood

*Woodworking machinery at its best!*

## Instructions for Pirate Skull Twist Pen




### Kit Features

- Minimal parts to assemble
- Pen uses Parker style refills (PENSR)
- Available in Antique Silver(PS1), Antique Bronze(PS2) or Antique Rose Copper(PS3)
- Overall length 152mm (6")

### Accessories Required

- 7mm Pen Mandrel (PM1MT or PM2MT)
- 3/8" Drill Bit (PBD38)
- Bushing Set (PSBUSH)
- Barrel Trimmer with Shaft (PENBT + PENBTP)
- Adhesive – 2 Part Epoxy, Polyurethane or Medium Cyanoacrylate
- Blank of minimum size 19mm x 90mm (3/4" x 3.1/2")
- Assorted grit sheets (PN70MIX) and (PENSP)

### Diagram A – The Parts included in the Kit

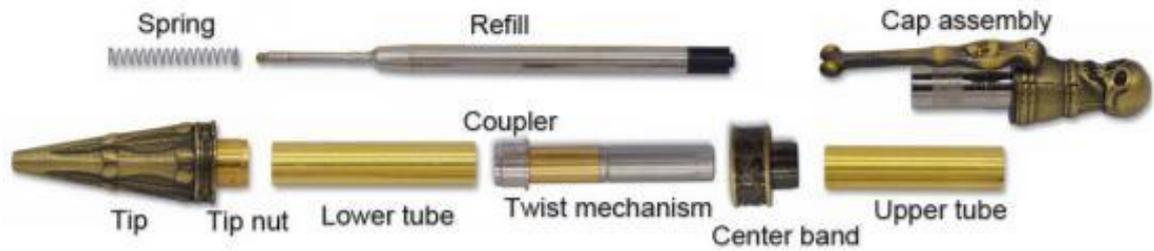

### Preparing the Blank


Step 1 – Cut 2 blanks (wood or acrylic) to the length of the brass tubes plus a small amount (approx. 2mm) for trimming.

Step 2 – Drill a 3/8" hole length wise through the blank. Use a slow speed and avoid using excessive pressure as this could cause the drill to wander or the blank to crack. Back out the drill regularly to clear chips and prevent overheating.

Step 3 – Roughen the outside of the tube with coarse (80g) abrasive. With your choice of epoxy, polyurethane or medium cyanoacrylate adhesive, cover the outside of the tube and insert into the blank using a twisting motion to ensure that the glue is evenly spread. If using a polyurethane glue, wet the inside of the blank before inserting the tube. Centre the tube lengthwise and allow to dry. If using a translucent acrylic blank it is advisable to paint the inside of the bored hole or brass tube white as this will enhance its colour and prevent the tube being visible.

Step 4 – Using a Barrel Trimmer with 3/8" shaft, square the ends of the blank 90 degrees flush to the ends of the brass tube. Alternatively this can be done using a disc/belt sander. Take care not to over trim the tube/blank as this will shorten the barrel and may affect the operation of the mechanism. Ensure that the inside of the tube is clear of dried glue. The use of a Tube Insertion Tool (PENTI) will minimise contact with the glue.

### Diagram B – Mandrel Assembly

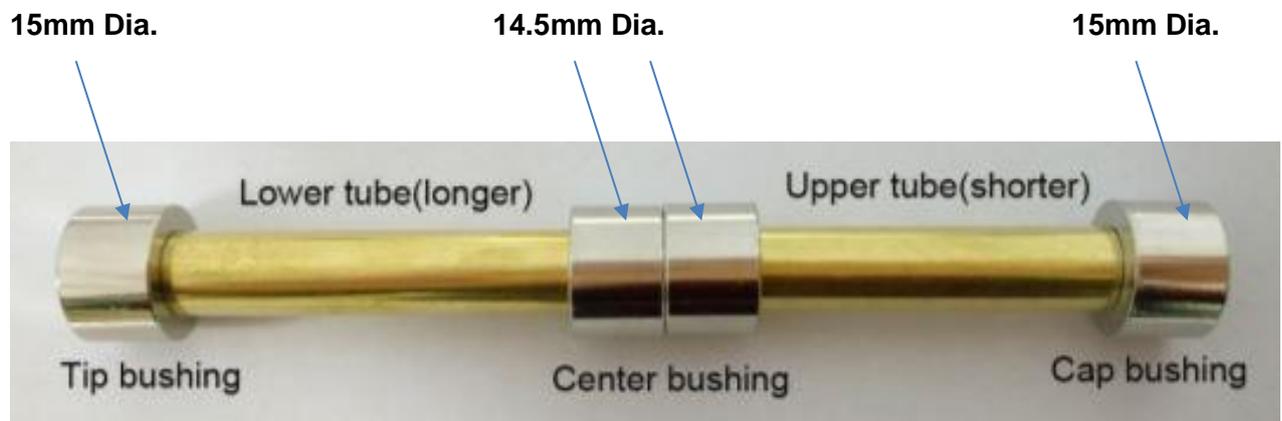

## Turning the Blank

Step 5 – Mount the bushings and blank on the mandrel according to Diagram B and hand-tighten the knurled nut to hold all components in place. If you plan to finish your pen with a varnish or CA, first apply a little paste wax polish to the bushings which will help prevent them from sticking. Slide the tailstock and live centre up to the mandrel & locate the point in the dimple in the end of the shaft. Lock in place and lightly tighten the quill to remove any play. Take care not to overtighten as this could bend the mandrel shaft.

Step 6 – Using sharp tools, turn down the blank to a diameter slightly larger than the bushings. The profile of the barrel can be straight or shaped, but take care when making the final cuts as the material remaining could be less than 1mm thick.

Step 7 – Reduce the speed of the lathe and sand the barrel to the diameter of the bushings. Start with 150 grit abrasive, progressing through higher grades up to 400 or 600 grit. Always stop the lathe and sand along the length of the barrel before continuing to the next grade of abrasive. Abranet is the ideal abrasive as this does not clog.

Step 8 - A wood finish of your choice can then be applied. For a glass-like finish on acrylic, or wood with CA applied, continue sanding at a higher speed using Foam Backed Sanding Pads (PENSP) wet, through 1500,1800, 2400, 3200, 3600,4000, 6000, 8000 grits and up to 12000 grit.

Step 9 – Remove the barrel from the mandrel. Depending on the finish applied, it might be necessary to remove any overspill by lightly sanding the ends by gently twisting them on a piece of 120 grit abrasive placed on a flat surface.

## Assembly

*It is possible to assemble your pen using a suitably sized wood clamp, but this process is made much easier by using Pen Press Set (PP1MT or PP2MT) fitted to your lathe.*

Step 10 – Line up and identify the finished parts according to Diagram A. Some parts may be supplied ready assembled in which case they should be unscrewed.

Step 11 – Press the tip nut, recessed end in first into the bottom end of the lower tube.

Step 12 – Press the coupler, recessed end in first into the opposite end of the lower barrel.

Step 13 – Place the spring over the refill tip, then insert the refill into the opening at the coupler.

Step 14 – Screw the twist mechanism over the refill end.

Step 15 – Press the band, recessed end in first into the 14.5mm Dia. End of the upper tube.

Step 16 – Press the cap assembly into the opposite end of the upper tube making sure the clip and skull are lined up.

Step 17 – Press from both ends until the gap in the centre is closed.

*Twist to operate.*

**Charnwood, Cedar Court, Walker Road, Bardon, Leicestershire, LE67 1TU**  
**Tel. 01530 516 926 Fax. 01530 516 929 email: [sales@charnwood.net](mailto:sales@charnwood.net)**

**[www.charnwood.net](http://www.charnwood.net)**